

# CTI-Cryogenics® On-Board® IS 320FX Cryopump

**VACUUM PRODUCTS** 

#### **Benefits**

- Specifically designed for ion implant applications
- Optimized for tool throughput
  - 33% increase in hydrogen capacity
  - 10% increase in hydrogen pumping speed
  - Meets existing safety guidelines
- Intelligent "self adjusting" technology
  - Automatic cryogenic heat load compensation
  - Variable speed motor and control system with reduced vibration
- Lower cost of ownership
  - More pumps per compressor
  - Energy savings with no compromise in productivity
  - Variable-speed motor for maximizing pump operational life
- Increased uptime
  - IntelliPurge power failure pump management

The On-Board® IS 320FX Cryopump, developed specifically to address the challenges of today's lon Implant processes, provides enhanced hydrogen pumping speed and capacity while maintaining all the quality, performance and reliability benefits you've come to expect from the On-Board® IS 320FE cryopump.

The On-Board IS 320FX cryopump is designed to deliver the highest hydrogen vacuum pumping speed and capacity possible for improved product yield and tool throughput. Building on Brooks' extensive cryogenic pump design expertise, this cryopump outperforms all other comparably sized pumps while meeting stringent safety guidelines.

Intelligent system controls deliver better process quality, vacuum consistency and up-time, while providing real-time system knowledge for optimized motor speed and cryogenic temperature. Automatic adjustment for changing heat/gas loading conditions enhances vacuum consistency and improves inter-wafer recovery time. These cryopumps also adjust for accumulation of process-related coatings without compromising reliability or productivity.

The On-Board IS system ensures full use of system-level helium resources for any operational condition. A patented control system continuously regulates the helium allocation per pump, thereby increasing the pump-to-compressor ratio for reduced


cost of ownership. In addition, On-Board IS cryopump systems reduce power and cooling water consumption.

A state-of-the-art cryogenic array design with higher capacity brings about longer run times between regeneration and reduces the impact of ion implant residuals for longer pump life. "IntelliPurge" power management reduces unexpected pump regeneration due to a short-term power failure and ensures safety during an extended power outage. Proprietary regeneration sequences shorten regeneration time and ensure pump performance consistency after regeneration.

An integrated TC gauge and gate valve interlock eliminates the need for additional controllers, while integrated rough/purge/vent valves and controls simplify installation and improve system reliability.



# Maximum Vacuum Performance between Regenerations

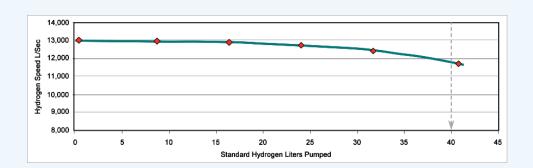

## Performance Specifications

On-Board IS 320FX
11,000 L/Sec
3,600 L/Sec
13,000 L/Sec
3,000 L/Sec
40 L
300 Torr-L
150 Minutes
75 Minutes
12.6 inches (320

### **Physical Features**

# Features for On-Board IS 320FX

ntegrated Controls		Integrated Accessories
Pump-mounted, Field-replaceable Module		First and Second Stage Temperature Sensors
Motor Drive Electronics		First and Second Stage Heaters
Host Communication Interface		Purge Valve
(RS-232C, DB-9 Connector)		Roughing Valve
First Stage Temperature Control		Vacuum (T <sub>C</sub> ) Gauge
Helium Management		Pressure Relief Valve
Service Communications Port		Exhaust Purge Valve
Remote Display Option		IntelliPurge System
Gate Valve Control		
ump Motor	Variable Speed (3Ø, Lo	w Vibration)
ower	200/230 VAC 50/60 H	z 1Ø, (5A)
Compatible Compressors	On-Board® IS-2000V, C	)n-Board® IS-1000V

#### Backed by GUTS®

All CTI-Cryogenics products are backed by the GUTS® (Guaranteed Up-Time Support) rapid response network, our unique, comprehensive global customer support program. When you call a GUTS® service center, you are guaranteed immediate, competent response and action by a vacuum expert from our worldwide technical support staff. We're at work for you 24 hours a day, 365 days a year. In the U.S., dial 1-800-FOR-GUTS (800-367-4887).

For more information, please contact your local Brooks Automation sales representative or visit www.brooks.com.



Brooks Automation, Inc. • 15 Elizabeth Drive • Chelmsford, MA 01824 U.S.A. • Tel: (978) 262-2400 • Fax: (978) 262-2500 • www.brooks.com

<sup>\*</sup> Measurements per: "Recommended Practices for Measuring the Performance and Characteristics of Closed-Loop Gaseous Helium Cryopumps,"